






Thank you for choosing OKIOCAM! This quick start guide will walk you through the steps to set up your OKIOCAM with OKIOCAM Snapshot and Recorder and third-party software.

For more information about OKIOCAM, please visit our **Help Desk**.

The OKIOLABS Team

- www.okiolabs.com
- www.twitter.com/okiolabs
- www.facebook.com/OkiolabsUS



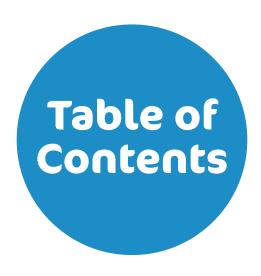

A. OKIOCAM overview ·····	4
B. Installing OKIOCAM Snapshot and Recorder ······	6
C. Using Snapshot and Recorder with your OKIOCAM ···	6
D. Introduction to the OKIOCAM Education Kit ······	·····7
E. OKIOCAM + third-party software ······	8
Video conferencing apps:	
- Google Meet · · · · · · · · · · · · · · · · · ·	8
- zoom · · · · · · · · · · · · · · · · · ·	9
- Skype	10
- Microsoft Teams · · · · · · · · · · · · · · · · · · ·	11
Learning apps:	
- Flipgrid · · · · · · · · · · · · · · · · · · ·	12
- Screencastify	••••13
- Seesaw · · · · · · · · · · · · · · · · · · ·	14





The new OKIOCAM S firmware gives all the buttons on your OKIOCAM predefined functions and enables them to work in third-party apps such as Zoom, Google Meet, Microsoft Teams, and many more.

If the buttons on your OKIOCAM do not function as outlined in the image at the top of the next page, please update its firmware to the latest version. OKIOCAMs purchased after late-January 2021 come with the new firmware pre-installed, but those purchased earlier will need to be updated. Please download the firmware update to check that you have the latest version installed and to update if necessary.

The firmware update can be downloaded here:

www.okiolabs.com/download

Our firmware update guides can be found here:

Windows macOS





Decreases the camera's exposure (brightness).

Increases the camera's exposure (brightness).

If your camera's image appears upsidedown, use this button to flip it 180 degrees. This feature gives you additional flexibility over the position and orientation of your OKIOCAM.

Left-hand connector. You can detach the camera from the arm and attach it back to the arm using this. Suitable for left-handed users.

Adjusts the camera's focus, exposure, and white balance automatically. Is the image quality not quite clear enough? Press this to fix it in an instant!


 Tripod mount. You can detach the camera from the arm and attach it to a tripod. Works with any standard 1/4"-20 tripod mounting thread.



Installing OKIOCAM Snapshot and Recorder

Please download OKIOCAM Snapshot and Recorder from www.okiolabs.com/download. You can use Snapshot and Recorder to take snapshots and videos with your OKIOCAM.

Using Snapshot and Recorder with your OKIOCAM

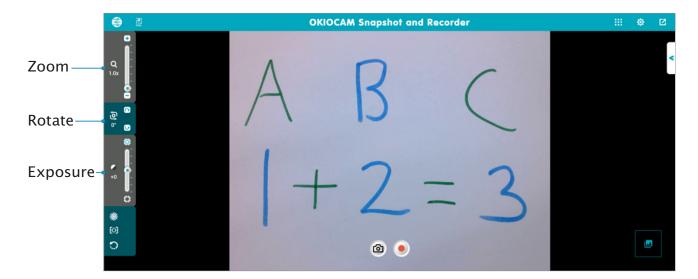

- Take a snapshot by clicking on the (a) icon.
- Start a video recording by clicking on the icon.
- Click the (1) icon to pause and the (1) icon to end the video recording.
- Enter Review Mode by clicking the icon. From here you can view your previously taken snapshots and videos.
- Use the Zoom slider to control the level of zoom between 1x and 6x.
- Click the Rotate arrows to rotate the camera clockwise and counterclockwise.
- Use the Exposure slider to adjust the level of exposure.
- Press the icon to freeze the camera feed.
- Press the icon to adjust the camera's focus, exposure, and white balance automatically.
- Press the icon to reset the camera.



Introduction to the OKIOCAM Education Kit

In addition to OKIOCAM Snapshot and Recorder, the OKIOCAM Education Kit also includes other awesome software. Use OKIOCAM Stop Motion and OKIOCAM Time-Lapse to make ultracool stop motion and time-lapse videos! You can improve your productivity and save bags of time with our Google Chrome add-ons for Docs, Sheets, Slides, and Forms, too!

Go to www.okiolabs.com/download to download all our software.











OKIOCAM + third-party software


Top tip

When using third-party apps, if you are seeing mirrored video, don't worry, your OKIOCAM is not faulty. Most video conferencing apps will mirror your camera in the preview window by default. However, anybody who you are transmitting your video to will see the non-mirrored video.

OKIOCAM works with all the most popular video conferencing apps and learning apps. Here's how you can get up and running with some of them:

Video conferencing apps:




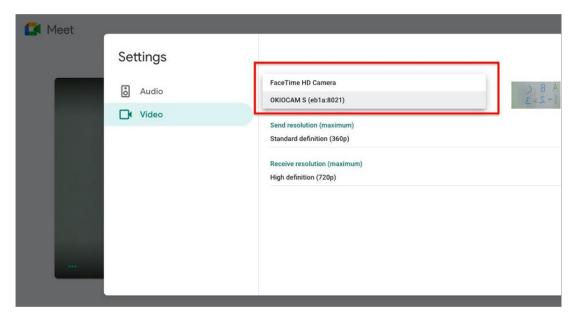

- 1 Click the **More options** icon in the bottom right-hand corner.
- Settings.
- Video.
- 4 Select **OKIOCAM** from the **Camera** drop-down menu.





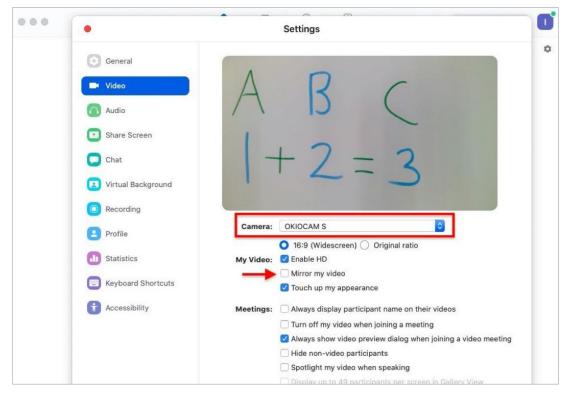


- 1 Click the **Settings** icon in the top right-hand corner.
- Video.
- 3 Select **OKIOCAM** from the **Camera** drop-down menu.

To turn off video mirroring,

- 1 Click the **Settings** icon in the top right-hand corner.
- Video.
- 3 Deselect Mirror my video.






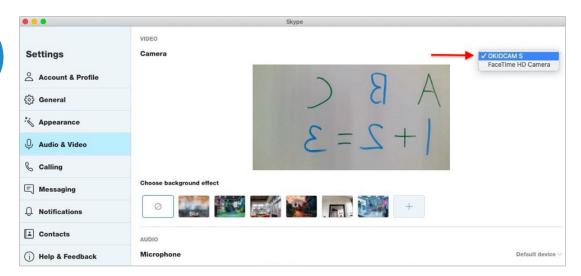

- 1 Click the **More options** icon in the top left-hand corner.
- 2 Settings.
- 3 Audio & Video.
- 4 Select **OKIOCAM** from the **Camera** drop-down menu.





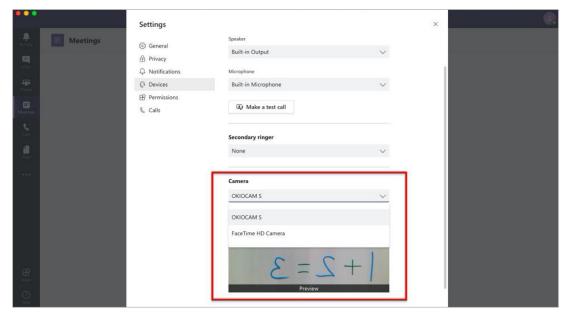


- 1 Click the **Profile** icon in the top right-hand corner.
- 2 Settings.
- 3 Devices.
- 4 Select **OKIOCAM** from the **Camera** drop-down menu.



Learning apps:




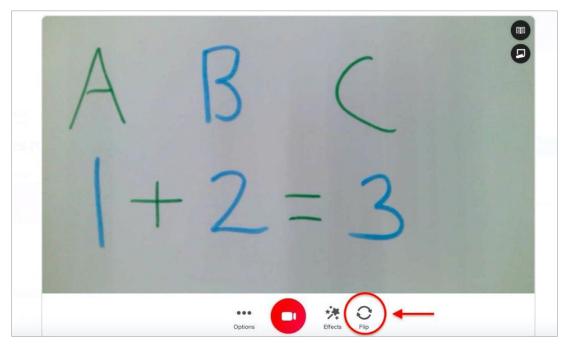

- 1 On the Create a New Topic page, click on the Record a Video icon.
- **2** Switch to your OKIOCAM by clicking on the **Flip** icon.






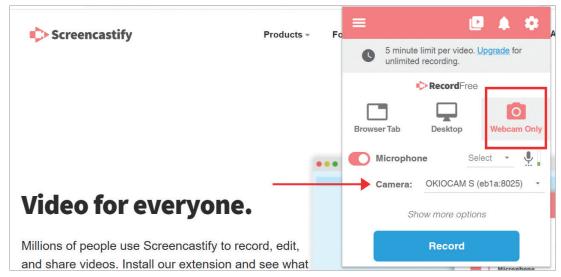

- 1 Click the Webcam Only icon.
- 2 Select **OKIOCAM** from the **Camera** drop-down menu.





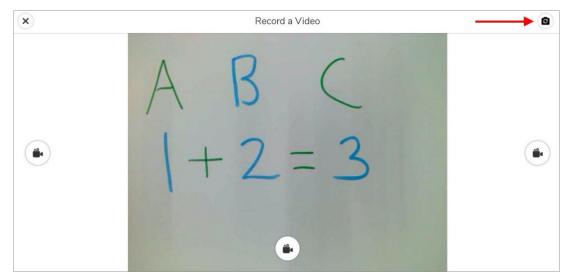

- 1 On the Create New Activity page, click on Add Multimedia Instructions or Example.
- 2 Video.
- 3 Switch to your OKIOCAM by clicking on the Camera icon in the top right-hand corner.

If you have any questions or need any help using your OKIOCAM, please click here.